


D Montageanweisung
 F Instructions d'installation
 I Istruzioni di montaggio
 NL Installatievoorschrift
 DK Installasjonsinstruktus
 N Installationsinstruktioner
 FIN Asennusohje
 S Installation instruktioner
 E Instrucciones de montaje

VRM/VRK

INSTALLATION INSTRUCTIONS

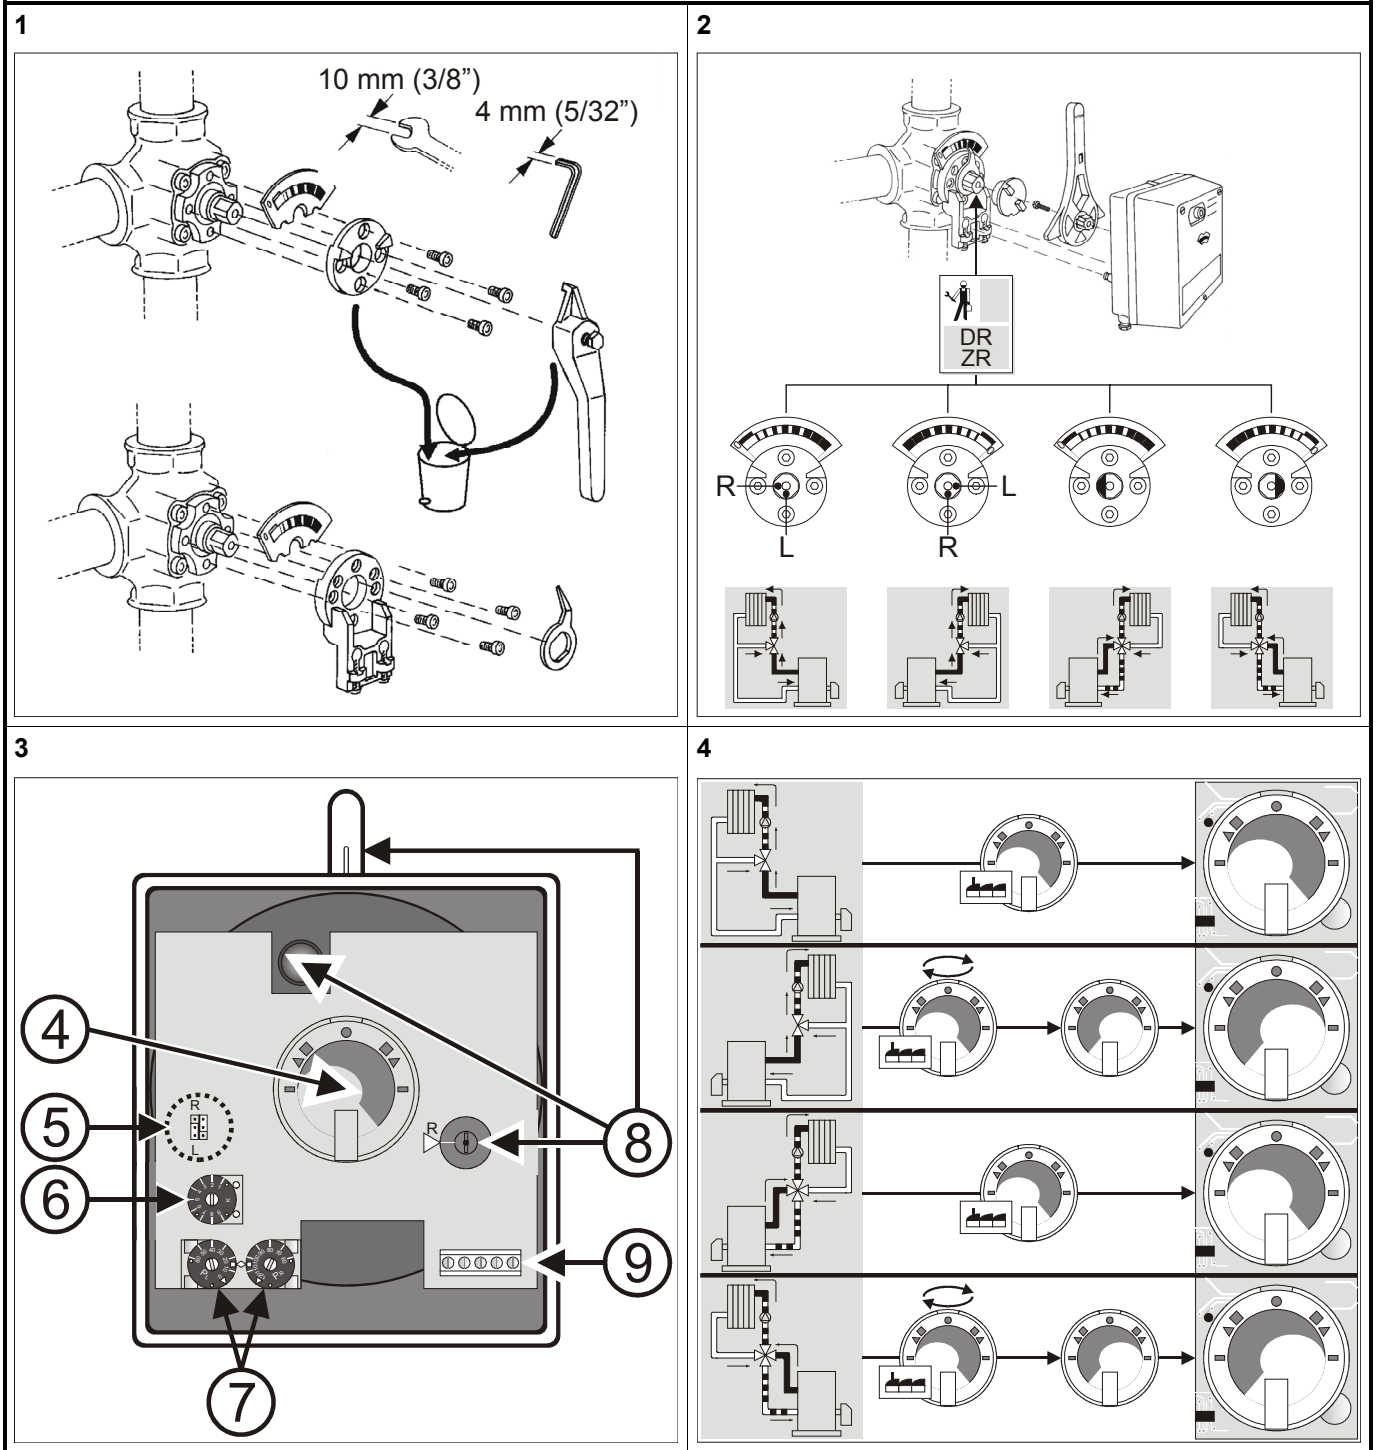

5

	<p>R</p> <p>0...10V 2...10V</p>	<p>Y = 10 V</p> <p>90° CW</p>
	<p>R</p> <p>0...10V 2...10V</p> <p>L</p>	<p>Y = 10 V</p> <p>90° CCW</p>
	<p>R</p> <p>0...10V 2...10V</p>	<p>Y = 10 V</p> <p>90° CW</p>
	<p>R</p> <p>0...10V 2...10V</p> <p>L</p>	<p>Y = 10 V</p> <p>90° CCW</p>

6

K=1

K=3

K=5

K=7

K=9

7

$P_L + P_R = \sphericalangle 90^\circ$

$P_L + P_R = \sphericalangle 120^\circ$

8

9

0% :

100% :